

Panther 5 LCD Replacement

1. Remove 6 Rubbers



2. Remove the six Screws




3. Remove the LCD Front Cover



4. Remove the 8 LCD screws (4 per side)



5. Lay the LCD on a soft cloth on the keyboard

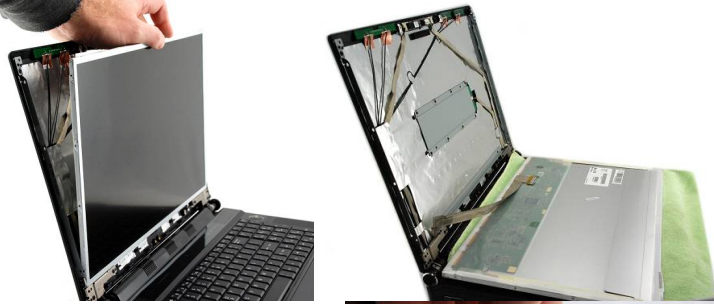

6. Pull back tape and disconnect cable

