

## Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** & **2** ([Figure 5a](#)).
3. Remove the hard disk bay cover **3** ([Figure 5b](#)).
4. Remove the screw at point **4** ([Figure 5c](#)), and use a screwdriver to carefully push out the optical device **5** at point **6** ([Figure 5d](#)).
5. Reverse the process to install any new optical (CD/DVD) device.

*Figure 5*  
**Optical Device Removal**

- a. Locate the hard disk bay cover and remove the screws.
- b. Remove the hard disk bay cover.
- c. Remove the screw.
- d. Use a screwdriver to carefully push the optical device out.

