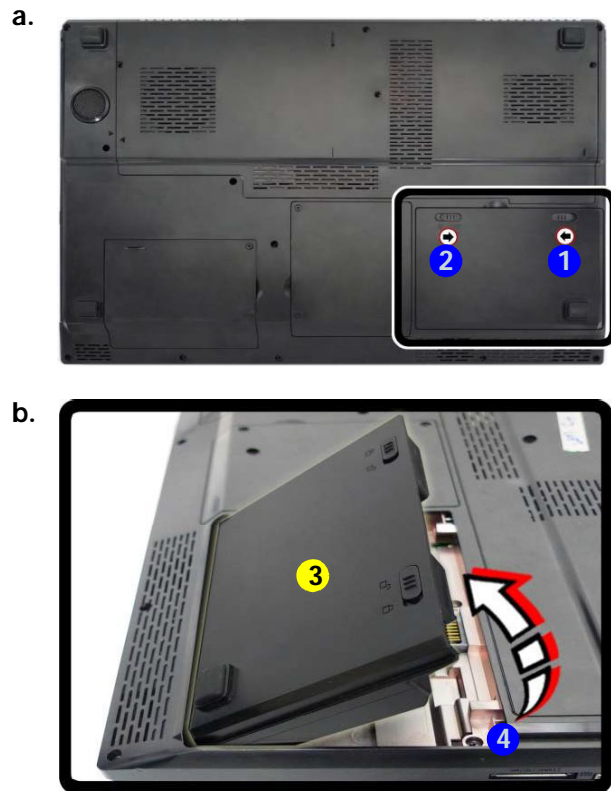



## Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Lift the battery **3** out in the direction of the arrow **4** (*Figure 1b & Figure 1c*).



*Figure 1*  
**Battery Removal**

- a. Slide the latch and hold in place.
- b. Slide the battery in the direction of the arrow.
- c. Lift the battery out in the direction of the arrow.

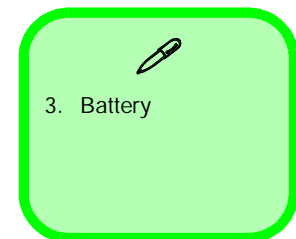

## Disassembly



*Figure 10*  
RAM Module  
Removal

- Remove the top cover module.
- Remove the screws.
- Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.

## Removing the Secondary System Memory (RAM)

### Memory Upgrade Process

- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)) and the component bay cover.
- Remove the top cover module **A** ([Figure 10a](#)).
- Remove screws **1** - **5** ([Figure 10a](#)).
- Carefully lift the keyboard **B** up, being careful not to bend the keyboard ribbon cable **6** ([Figure 10c](#)).

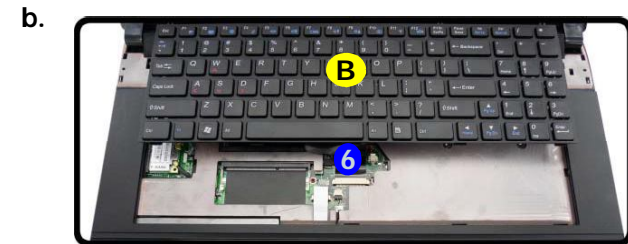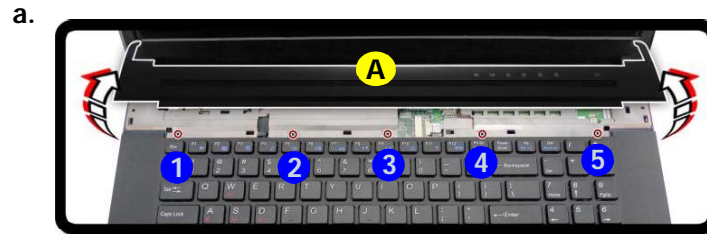

- A. Top Cover Module
- B. Keyboard
- 5 Screws