

Keyboard Removal:

1. Please remove battery.
 2. Lift and remove the keyboard cover. (Fig 1)
 3. Remove the 5 screws from the keyboard and remove. (Fig 2)
 4. Flip the keyboard forward and see the connection for the USB. (Fig 3)
 5. Make sure the connection is well socketed.
- For installation please reverse steps.



Fig 1

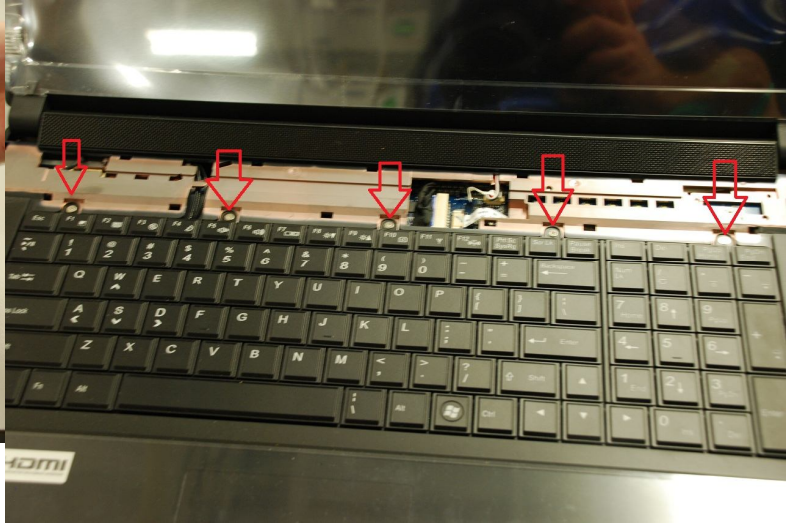


Fig 2



Fig 3

Close Up of Connector

