

Disassembly

Figure 2
Optical Device Removal

- Remove the screws.
- Remove the cover.
- Remove the screw.
- Push the optical device out of the computer.

Removing the Optical (CD/DVD) Device

- Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)).
- Locate the hard disk bay cover and remove screws ① - ②, and remove the bay cover ③.
- Remove the screw at point ④, and use a screwdriver to carefully push out the optical device at point ⑤.
- Push the optical device drive ⑥ out of the bay and reverse the process to install the new device.



- 
- 3. Hard Disk Bay Cover
 - 6. Optical Device
 - 3 Screws



Blu-Ray Device Bezel Removal

Note that some Blu-Ray modules (e.g. Pioneer) have a small piece of mylar inserted in the left side (as viewed front on) of the bezel cover; in order to prevent the bezel cover of the module from being removed accidentally. If you need to replace the bezel cover, you will need to use a screwdriver to ease out and remove the mylar before attempting to remove the bezel cover. You will need to re-insert the mylar when replacing the bezel cover.